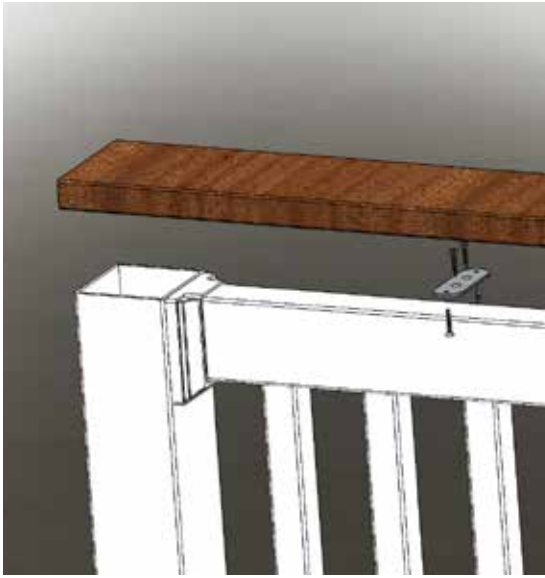

DECKOVER ATTACHMENT KIT



Attach metal brackets to the vinyl top rail.

- Place bracket within 12" of each railing post.
- Center the two inner holes of the metal bracket on the top of the rail.
- Attach metal bracket to top rail using two of the included screws.
- Be sure that bracket screws go through the top rail's metal insert.
- Attach remaining brackets evenly spaced along top rail, with no more than 24" between brackets.



Place deck board on top rail.

- Be sure that the board is centered, with the same amount of overhang on each side of the top rail.



Secure deck board to top rail.

- Drive the included screws through the outer holes of the metal bracket and into the deck board from underneath.



The deck board attachment kit is not recommended for use with deck boards that are twisted, warped, curved, or less than 1" thick. It is the responsibility of the installer to ensure compliance with all applicable building codes.
